


Hood Latch Install Tips

1) Install Studs first:

Locate your desired location of the studs and adjust them to where they Barely Touch the bottom of the Hood when its in the closed position.

This Step is important to be able to mark the hood where you need to drill the hole for the latch to be centered to the stud.

(Its very Important that the studs be Parallel to each other. If not the latches will bind when you close the hood)

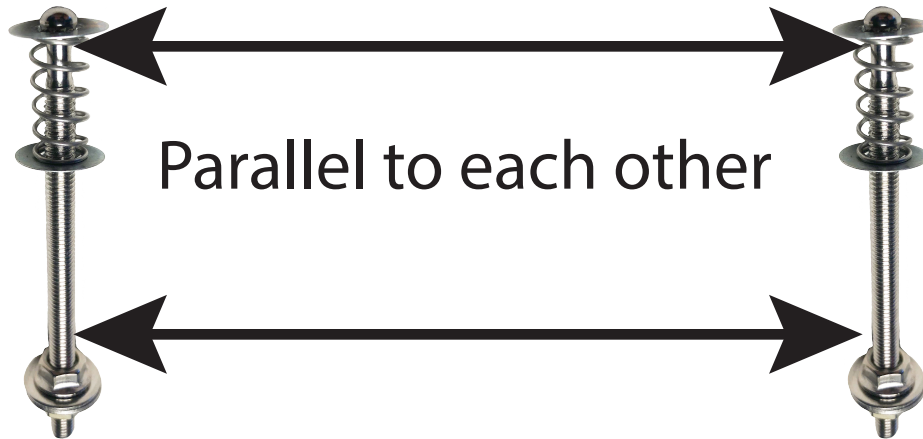

Once you have them parallel to each other and adjusted to a height of just barley touching the bottom side of the hood We suggest you take a paint pen or use some white out and place a small dot at the top and center of each stud. To transfer this mark to the underside of the hood when closed.

Now you are ready to drill your holes for the latches

We suggest using a 1/8-1/4" Drill bit first Going threw all layers of the hood and establishing your centers.

Our Pro Series 1.75" & 2.5" Latch body will need a 1.250" Hole Saw hole to Mount the latch bodies.

Very Important Step!!!!

**Use a Thread Lock on the set screws before you install them!!!
((((If not they will back out)))**

Any questions feel free to email us at Pushbuttonlatches@gmail.com